



HOSE CRIMPING TECHNOLOGY

INTRODUCING A NEW *ACT™* IN CRIMPING: *Automatic Crimp Technology!*

Patented: No 7,383,709

**150 CRIMP STORAGE
MEMORY SLOTS**

**50 DIE STORAGE
MEMORY SLOTS**

ADJUSTS CRIMP EASILY

PRODUCTION MODE

FAST DIE CHANGE

**NO INCH/METRIC
CONVERSION
EVER
REQUIRED**

**TECHNOLOGY
SENSES VARIATIONS
DURING CRIMPING
OPERATION AND
ADJUSTS CRIMP
OFFSET ON THE FLY**

**ACCURATE CRIMP
FIRST TIME
REDUCING SCRAP**

THE EASIEST CONTROLLER YOU WILL EVER USE

- **ENTER CRIMP DIAMETER AND DIE SIZE IN EITHER INCH OR METRIC:
ACT™ ACCEPTS EITHER INCH OR METRIC.**
- ***ACT™* TECHNOLOGY SENSES BOTH THE CRIMP DIAMETER AND CRIMP FORCE REQUIRED.
THE CRIMP DIAMETER YOU ENTER IS THE CRIMP DIAMETER YOU GET. "OFFSET
ADJUSTMENT" AND "TWEAKING" IS SELDOM IF EVER REQUIRED.**
- **IF A SLIGHT CORRECTION IS NEEDED, JUST ENTER THE MEASURED CRIMP DIMENSION
IN EITHER INCH OR METRIC AND *ACT™* AUTOMATICALLY ADJUSTS TO COMPENSATE,
NO ADDITION OR SUBTRACTION FOR YOU TO CALCULATE!**
- **STORE FREQUENTLY USED SETTINGS IN MEMORY:
ACT™ WILL RECALL DIE AND CRIMP SETTINGS.**
- **AUTO MODE INCLUDES NEW PRODUCTION FEATURE THAT INTERRUPTS PRODUCTION
AND INSTRUCTS YOU TO ENTER CRIMP MEASUREMENT, *ACT™* AUTOMATICALLY
ADJUSTS CRIMPER ACCORDINGLY.**
- **EASY TO FOLLOW SCREEN PROMPTS AND DURABLE TOUCH SCREEN
MAKE THIS *THE EASIEST CONTROLLER YOU WILL EVER USE!***

Hose Crimpers and Accessories from CustomCrimp®

Custom Machining Services, Inc.

www.customcrimp.com

(219)462-6128

 


ACT™ controller brings up easy screen prompts to lead an operator through the set up and crimping cycle.



No inch/metric conversions or calculations are ever required!




- Turn on the master power switch and simply press the screen prompt button "START MOTOR"
- Choose "CRIMP TO DIAMETER" for new crimp set up OR "USE SAVED CRIMP" If previous crimps were saved to memory.
- If "CRIMP TO DIAMETER" is selected the "ENTER CRIMP" screen appears.
- Enter desired crimp diameter and die size in any order and in either inch or metric. No conversion is ever required.

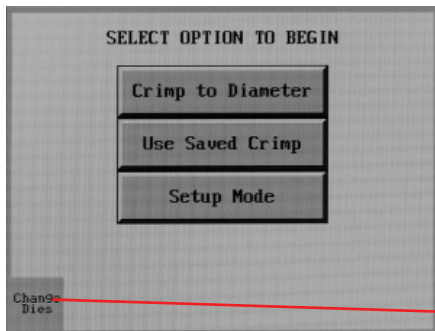

  - If you make an error, A warning screen will appear in order that corrections can be made BEFORE you damage Crimper.
- If you need to change dies, there is no need to "zero" the machine. Simply press the "CHANGE DIES" button in the lower left corner of the screen. All of your settings will still be remembered!

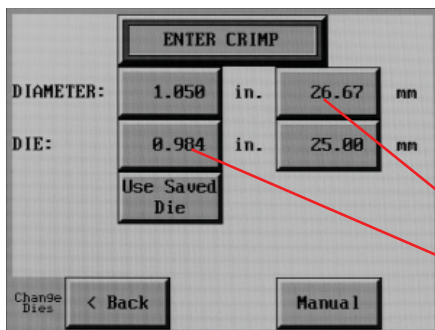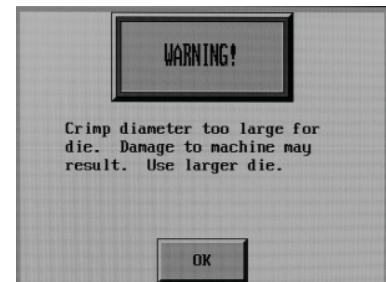

 - When die size and crimp diameter have been entered, press the "MANUAL" button and press the "CYCLE START" button on the front of the controller.
- That's all there is to it!

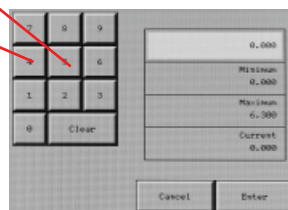

KEY PAD ONLY POPS UP WHEN DATA ENTRY IS REQUIRED KEEPING THE SCREEN FREE OF CLUTTER AND CONFUSION.

THIS IS THE EASIEST CONTROL YOU WILL EVER USE!